

RMA Breaker Disconnect Box

Specifications


- NEMA3R enclosure
- Housing for circuit breaker
- 5-position ground bar and neutral bar

Safety requirements for use

- Circuit breaker sized to solar photovoltaic (PV) system output per NEC code

Warning Placard Location


Front of Breaker Disconnect

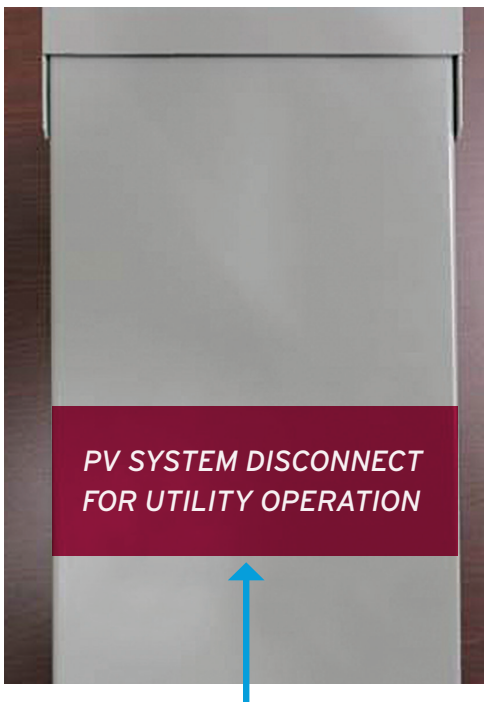

The warning plaque must be visible on front of RMA Breaker Disconnect. The warning plaque is supplied by the installer or customer. For installation instructions visit sdge.com/rma.

Interior of RMA Breaker Disconnect

Front panel removed

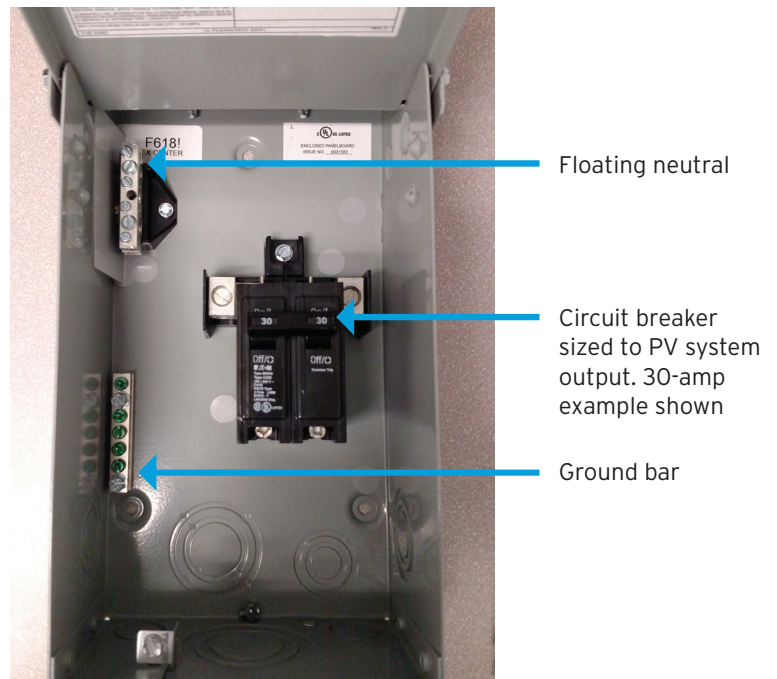

SDG&E will supply a circuit breaker sized to the PV system output as stated in the RMA request form, per NEC code calculations.